



TAUNOTENT



TONNEAU
COVER

This fitment applies to 2016+ Toyota Hilux Double cab clip on with and without roll bar.

Thank you for choosing our product. Please adhere to these instructions as closely as possible. Always ensure all safety equipment is used and that a safe working environment is established.

TOOLS:

The only tools required are:

- Rivet nut gun
- Screw driver

KIT COMPRISES:


- 3x Rivnuts with 3x screws and nuts.
- 2x Side rails, with plastic plugs
- 1x Back rail
- 2x Plastic back corners with 4x hand screws
- 4 x G clamps and high leveling screws
- 1x Tonneau cover
- 2x Aluminium Support braces
- 4x Support clips
- 1x Front rail

INSTRUCTIONS FOR FITMENT

1) Put the aluminum slide rail on the top edge of the load body, beneath the window. If there is rubberizing blocking the bolt holes, use the rail to locate the position and clean out the rubber using a blade. The shorter lip of the rail to be positioned towards the cab. Insert rivet nuts into holes and then using screws, attach rail to edge.



2) Fasten the two side rails using 2x clamps per rail. The plastic caps must sit flush with the front outside edge of the aluminum rail which just has been attached. See Picture

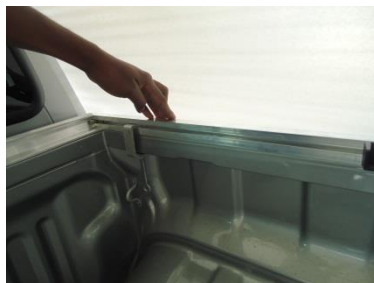




TAUNOTENT



This fitment applies to 2016+ Toyota Hilux Double cab clip on with and without roll bar.

Thank you for choosing our product. Please adhere to these instructions as closely as possible. Always ensure all safety equipment is used and that a safe working environment is established.

3. Install the rear rail over the tail gate by pushing the ends of the plastic corners into the side rails. Fasten into place by turning grip screw as tightly as possible, so that the rail may only be pulled out once the screws have been loosened.

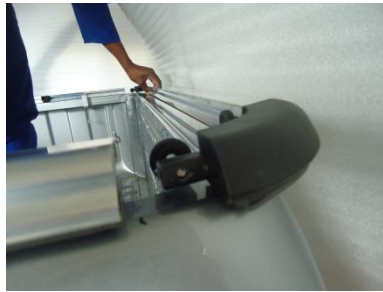

4) Insert aluminium support braces into bow clips ensuring they are equally spaced along the length of the load box. Slide cover into front rail and then pull cover towards tailgate.



5) Line up all the chips at tailgate first and then push them all down so that they clip into the rail. Do the same on the two sides. Pull the cover snugly over the plastic corners



6) The tailgate can open and close with the cover fitted.

7) The cover can be rolled to the front and fastened using the straps.

8) Should any part of the kit be lost or broken they can be purchased separately

