



TAJNOTENT

## INSTRUCTIONS FOR FITMENT




This fitment instruction apply to:  
ISUZU 2013: Double Cab and Extended Cab

Clip on Tonneau  
kit with and  
without roll bar

ISUZU DOUBLE CAB WITH AND  
WITHOUT ROLL BAR & EXTENDED  
CAB WITH AND WITHOUT ROLL  
BAR

### INSTRUCTIONS FOR FITMENT

1. Secure the front aluminum slide rail to the Load body. If there is rubberizing blocking the bolt holes, use the rail to locate the position and clean out the rubber. The shorter lip of the rail to be positioned towards the cab. Align the holes in the rail with the holes on the edge and secure rail with 3x bolts supplied in packet.

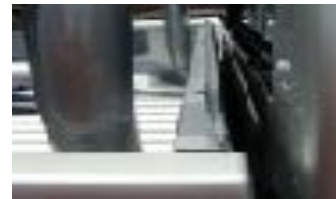

2. Fasten the two side rails using 2x clamps per rail. These rails are to sit flush with the front aluminum brace (As shown in picture). Please note that if your vehicle has the GM factory fitted roll bar, secure the front part of the side rail using the elongated teeth clamp which is fitted as seen in picture on right.



3. Install the rear rail over the tail gate by pushing the ends of the plastic corners into the side rails. Fasten into place by turning grip screw as tightly as possible, so that the rail may only be pulled out once the screws have been loosened.



4. Insert support braces into bow clips ensuring they are equally spaced along the length of the load box. Slide cover into front rail. Close Velcro around roll-bar and then pull cover to the tailgate.





TAUNOTENT

## INSTRUCTIONS FOR FITMENT CONTINUED

5. Close and secure the for booties of the cover around the 4 pipes of the roll bar, should the vehicle have one. Starting from the tailgate make sure the cover is centered then line up all the chips and then push them all down so that they clip into the rail.



6. Doing the same as you did at the tail gate clip the sides of the cover into the two side rails. Pull the corners snugly over the plastic corners using the tabs. When removing the cover always use the tabs to pull the first few chips out from the rail as this makes loosening the cover easier



**Retighten clamps and hand screws regularly as they tend to open while travelling. Should you experience any problems in fitting please do not hesitate to call us on 0861 82 8668**

**WARRENTY: THE STITCHING IS GUARENTEED FOR 6 MONTHS. PLEASE ONLY USE SUNLIGHT DISH SOAP TO WASH THE COVER AND DUBBIN TO POLISH. ALL CAR WASH PRODUCTS AND POLISHES SHOULD NOT BE USED ON TONNEAU COVER, AS WELL AS HIGH PREASSURE HOSES AND BRUSHES.**



TAUNOTENT

+27 0811 026 4990 / 0311 455 0627

[www.taunotent.co.za](http://www.taunotent.co.za) [info@taunotent.co.za](mailto:info@taunotent.co.za)

Unit 3, 159 Greenwale Road, Wilbart, Germiston