



TAUNOTENT

FITMENT INSTRUCTIONS



TONNEAU COVER

These fitment instructions apply to:
Nissan Navara: Double Cab

Clip-on Kit with or without
Roll bar or No Roll Bar

Thank you for choosing our product. Please adhere to these instructions as closely as possible. Always ensure all safety equipment is used and that a safe working environment is established.

TOOLS: Tools required: 5mm Alan Key; Number 10 spanner.

KIT COMPRISES:

- 1x Tonneau cover
- 2x Support braces
- 1x Front aluminium rail
- 2x Side rails
- 1x Back rail
- 2x Plastic corners
- 4x Stainless steel brackets
- 4x Bolts size 10 and nuts
- 4x G-clamps with hand screws

INSTRUCTIONS FOR FITMENT

1) Remove rack at front wall of load bin using an allen key. Insert 4 stainless steel brackets behind rack and reattach to the load bin. Attach aluminum rail to top of load bin and brackets using size 10 bolts and nuts.



2) Fasten the two side rails using 2x clamps per rail. The plastic caps must sit flush with the front outside edge of the aluminum rail which just has been attached. See Picture.




3) Install the rear rail over the tail gate by pushing the ends of the plastic corners into the open ends of these rails. Fasten into place by turning grip screws as tightly as possible



4) Insert support braces into bow clips ensuring they are equally spaced along the length of the load box.

5) Slide cover into front rail and close velcro around roll-bar and then pull cover towards tailgate. Line up all the chips at tailgate first and then push them all down so that they clip into the rail. Do the same on the two sides. Pull the corners snugly over the plastic corners using the tabs. When removing the cover start by lifting up the tabs to loosen the chips.

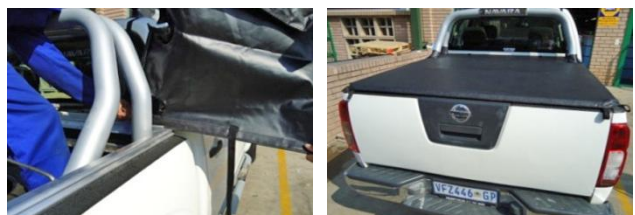



TAUNOTENT

FITMENT INSTRUCTIONS



TONNEAU
COVER

These fitment instructions apply to:
AMAROK: Double Cab

Standard with
roll-bar

Model No.
TT40

Thank you for choosing our product. Please adhere to these instructions as closely as possible. Always ensure all safety equipment is used and that a safe working environment is established.

INSTRUCTIONS FOR FITMENT *CONTINUED.*

6) Line up all the chips at tailgate first and then push them all down at once so that they clip into the rail. Do the same on the two sides. Pull the corners using the tabs. When removing the cover start by lifting up the tabs to loosen the chips



7) The tailgate can open and close with the cover fitted.

8) The cover can be rolled to the front and fastened using the straps.

9) Should any part of the kit be lost or broken they can be purchased separately .



Retighten clamps and hand screws regularly as they tend to open while travelling

Should you experience any problems in fitting please do not hesitate to call us on 0861 82 8668