

FITMENT INSTRUCTIONS



TONNEAU COVER

FITMENT INSTRUCTIONS FOR
A DOUBLE CAB WITH
ARTAV ROLLBAR

NEXT GEN FORD RANGER 2023

KIT CONSIST OF THE FOLLOWING:

- X1 FRONT RAIL
- X1 TAILGATE RAIL
- X2 SIDE RAILS (RIGHT AND LEFT)
- X2 SUPPORT BRACES (BACK AND FRONT)
- X2 CORNERS
- X4 CORNER SCREWS
- X8 CLAMPS
- X2 6mm BOLTS
- X2 6mm WASHERS
- X2 6mm NUTS
- X5 8mm BOLTS
- X5 8mm WASHERS
- X1 RIVNUT
- X4 BOWCLIPS


YOU WILL NEED:

- 10 SPANNER / SOCKET WRENCH
- 13 SPANNER / SOCKET WRENCH

1. FITTING THE FRONT RAIL



1.1
TAKE THE RIVNUT PROVIDED. REMOVE THE FILM/TAPE AND LINE IT UP WITH THE CENTRE HOLE OF THE LOAD BIN

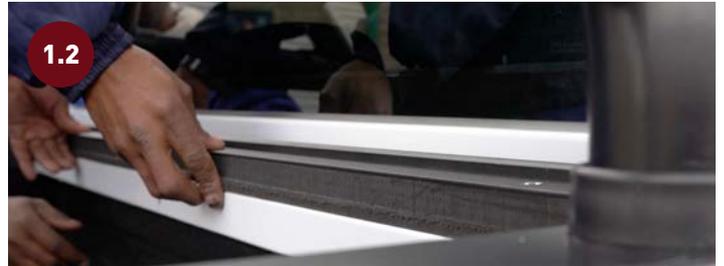

1.2
PLACE THE FRONT RAIL IN PLACE LINE UP THE HOLES IN THE RAIL WITH THE HOLES IN THE VEHICLE.

2. FITTING THE LEFT AND RIGHT-SIDE RAILS



2.1
SCREW THE 5X 8MM BOLTS PROVIDED INTO THE HOLES AND TIGHTEN BOLTS USING 13 SPANNER / SOCKET WRENCH.



2.2
LOOSEN ALL 8 CLAMPS



3.1
FIT THE FRONT SIDE RAIL INBETWEEN THE ROLLBAR LEGS.



3.2
FIT SIDE RAILS BETWEEN ROLLBAR AND TAILGATE



TAUNOTENT

+27 (0)11 455 0627 / +27 (0)11 026 4790 / +27 (0)63 517 0195
Unit 3, 159 Greenvale Road, Wilbart, Gauteng 1610

www.taunotent.co.za
info@taunotent.co.za

FITMENT INSTRUCTIONS



USE THE 8 CLAMPS PROVIDED AND FIT INTO THE INSERTS OF THE SIDE RAILS BUT DON'T TIGHTEN FULLY.



FIT THE LEFT AND RIGHT CORNERS INTO THE TAILGATE RAIL. USE THE SCREWS PROVIDED TO TIGHTEN.



PUSH TAILGATE RAIL INTO SIDE RAILS AND TIGHTEN SCREWS.



USE THE TAUNOTENT GAUGE PROVIDED TO LINE UP THE RAILS TO THE OUTSIDE OF THE BODY OF THE VEHICLE. CHECK ALL 4 SIDE RAILS ARE LINED UP FROM THE FRONT, MIDDLE AND BACK.

***DO NOT THROW YOUR GAUGE AWAY AS YOU WILL NEED IT EVERY TIME YOU NEED TO REFIT YOUR COVER. SOMETIMES THE CLAMPS COME LOOSE AND YOU WILL NEED YOUR GAUGE TO REFIT THE RAILS.**

4. FITTING THE SUPPORT BRACES



ONCE ALL IS LINED UP AND IN PLACE TIGHTEN ALL THE CLAMPS TO ENSURE THE RAILS ARE NOT MOVING OR SLIDING.

***PLEASE TIGHTEN YOUR CLAMPS AT LEAST ONCE A MONTH AS THEY BECOME LOOSE DURING TRAVELLING.**

5. COVER



SLIDE THE COVER INTO THE FRONT RAIL



USE THE SUPPORT BRACES LABELED FRONT AND BACK AND SLOT THEM INTO THE FOUR BOWCLIPS.

6. CLIPPING THE CHIPS



STARTING AT THE TAILGATE IN THE CENTRE, LINE UP THE CHIPS WITH THE LIP OF THE TAILGATE RAIL AND BEGIN PRESSING THE CLIPS INTO THE RAIL. CONTINUE CLIPPING THE CHIPS INTO THE RAILS UNTIL THE COVER IS SECURELY FITTED.



TAUNOTENT

+27 (0)11 455 0627 / +27 (0)11 026 4790 / +27 (0)63 517 0195
Unit 3, 159 Greenvale Road, Wilbart, Gauteng 1610

www.taunotent.co.za
info@taunotent.co.za

FITMENT INSTRUCTIONS



TROUBLESHOOTING:

If the cover is too tight or too loose when clipping into the rails, then rails need to be adjusted accordingly. Please feel free to call us if you have any fitment issues.

NOTE:

*DO NOT THROW YOUR GAUGE AWAY AS YOU WILL NEED IT EVERY TIME YOU NEED TO REFIT YOUR COVER. SOMETIMES THE CLAMPS COME LOOSE AND YOU WILL NEED YOUR GAUGE TO REFIT THE RAILS.

*PLEASE TIGHTEN YOUR CLAMPS AT LEAST ONCE A MONTH AS THEY BECOME LOOSE DURING TRAVELLING.

WE THANK YOU FOR PURCHASING A TAUNOTENT PRODUCT

Warranty: The stitching is guaranteed for 6 months. Please only use Sunlight dish soap to wash the cover and Dubbin to polish. All car wash products and polishes should not be used on the tonneau cover, as well as, high pressure hoses and brushes.



TAUNOTENT

+27 (0)11 455 0627 / +27 (0)11 026 4790 / +27 (0)63 517 0195
Unit 3, 159 Greenvale Road, Wilbart, Gauteng 1610

www.taunotent.co.za
info@taunotent.co.za