

FITMENT INSTRUCTIONS



TONNEAU COVER

JAC T9



JAC T9 Factory Fitted R/B

Tool requirement for fitment:

10mm Spanner / Socket wrench – Front rail and removal of the rollbar brackets, Drill, 10mm HSS Drill bit, 13mm Spanner / Socket Wrench – Removal of the rollbar brackets, Angle Grinder – Removal of the loadbin brackets, Riv-Nut Gun – To fasten Riv-nuts for front rail

Kit comprises: 1 x Aluminium front rail, 6 x Aluminium siderails with endcaps fitted (3 x left & 3 x right), 10 x Frame clamps, 1 x Aluminium Back rail, 2 x Back corners with holding screws, 4 x Plastic bowclips (fitted on the siderails), 2 x Support Braces (Front & Back), 3 x 6mm bolts with washers – Frontrail, 3 x Riv-nuts – Front rail

1. Remove the 2 rollbar brackets fitted behind the window using a 10mm and 13mm spanner / socket wrench

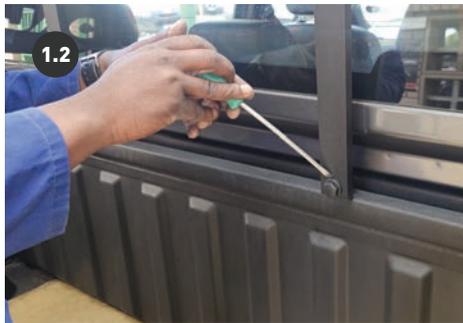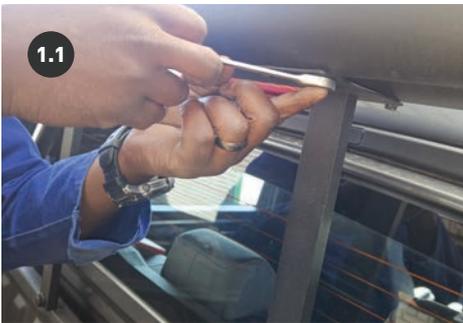

2. Remove the brackets welded onto the loadbin using an angle grinder then, insert 2 riv-nuts (left and right) – Holes are provided on the vehicle.



3. Fit the siderails on the vehicle on the left and right side and press down on the siderails, this will show you where to cut the foam around the bolts on the base plates of the rollbar.



TAUNOTENT

+27 (0)11 455 0627 / +27 (0)11 026 4790 / +27 (0)63 517 0195

Unit 3, 159 Greenvale Road, Wilbart, Gauteng 1610

www.taunotent.co.za

info@taunotent.co.za


- 4.** Fit the front rail on the vehicle and loosely tighten the 2 6mm bolts on the sides using a 10mm spanner / socket wrench. Mark the middle of the loadbin and remove the front rail. Drill a 10mm hole where the marked area is and insert Riv-nut. Fit the frontrail and tighten all 3 6mm bolts securely.



- 5.** Fit the complete frame on to the vehicle including the back rail. Ensuring the siderails and back rail sits flush with the inside of the loadbin, tighten all 10 clamps securely.



- 6.** Fit the support braces into the plastic bowlclips marked "front" and "back". Slide the cover into the front rail ensuring that the cover is centered, pull the cover towards the tailgate and clip the cover into the aluminium frame. Close the velcro around the rollbar all around the vehicle and clip the cover in.

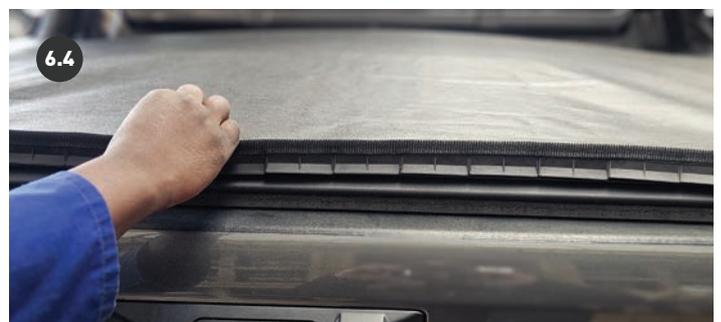

7. Finished product.



TROUBLESHOOTING: IF THE COVER IS TOO TIGHT OR TOO LOOSE WHEN CLIPPING INTO THE RAILS, THEN RAILS NEED TO BE ADJUSTED ACCORDINGLY. PLEASE FEEL FREE TO CALL US IF YOU HAVE ANY FITMENT ISSUES.

*PLEASE TIGHTEN YOUR CLAMPS AT LEAST ONCE A MONTH AS THEY BECOME LOOSE DURING TRAVELLING.

WE THANK YOU FOR PURCHASING A TAUNOTENT PRODUCT

WARRANTY: THE STITCHING IS GUARENTEED FOR 6 MONTHS. PLEASE ONLY USE SUNLIGHT DISH SOAP TO WASH THE COVER AND DUBBIN TO POLISH. AVOID ALL CAR WASH PRODUCTS, POLISHES, HIGH PRESSURE HOSES AND BRUSHES AS THESE DAMAGE THE TONNEAU MATERIAL.

